



DRAWING FOR REFERENCE: This is subject to change without notice  
05/31/2013

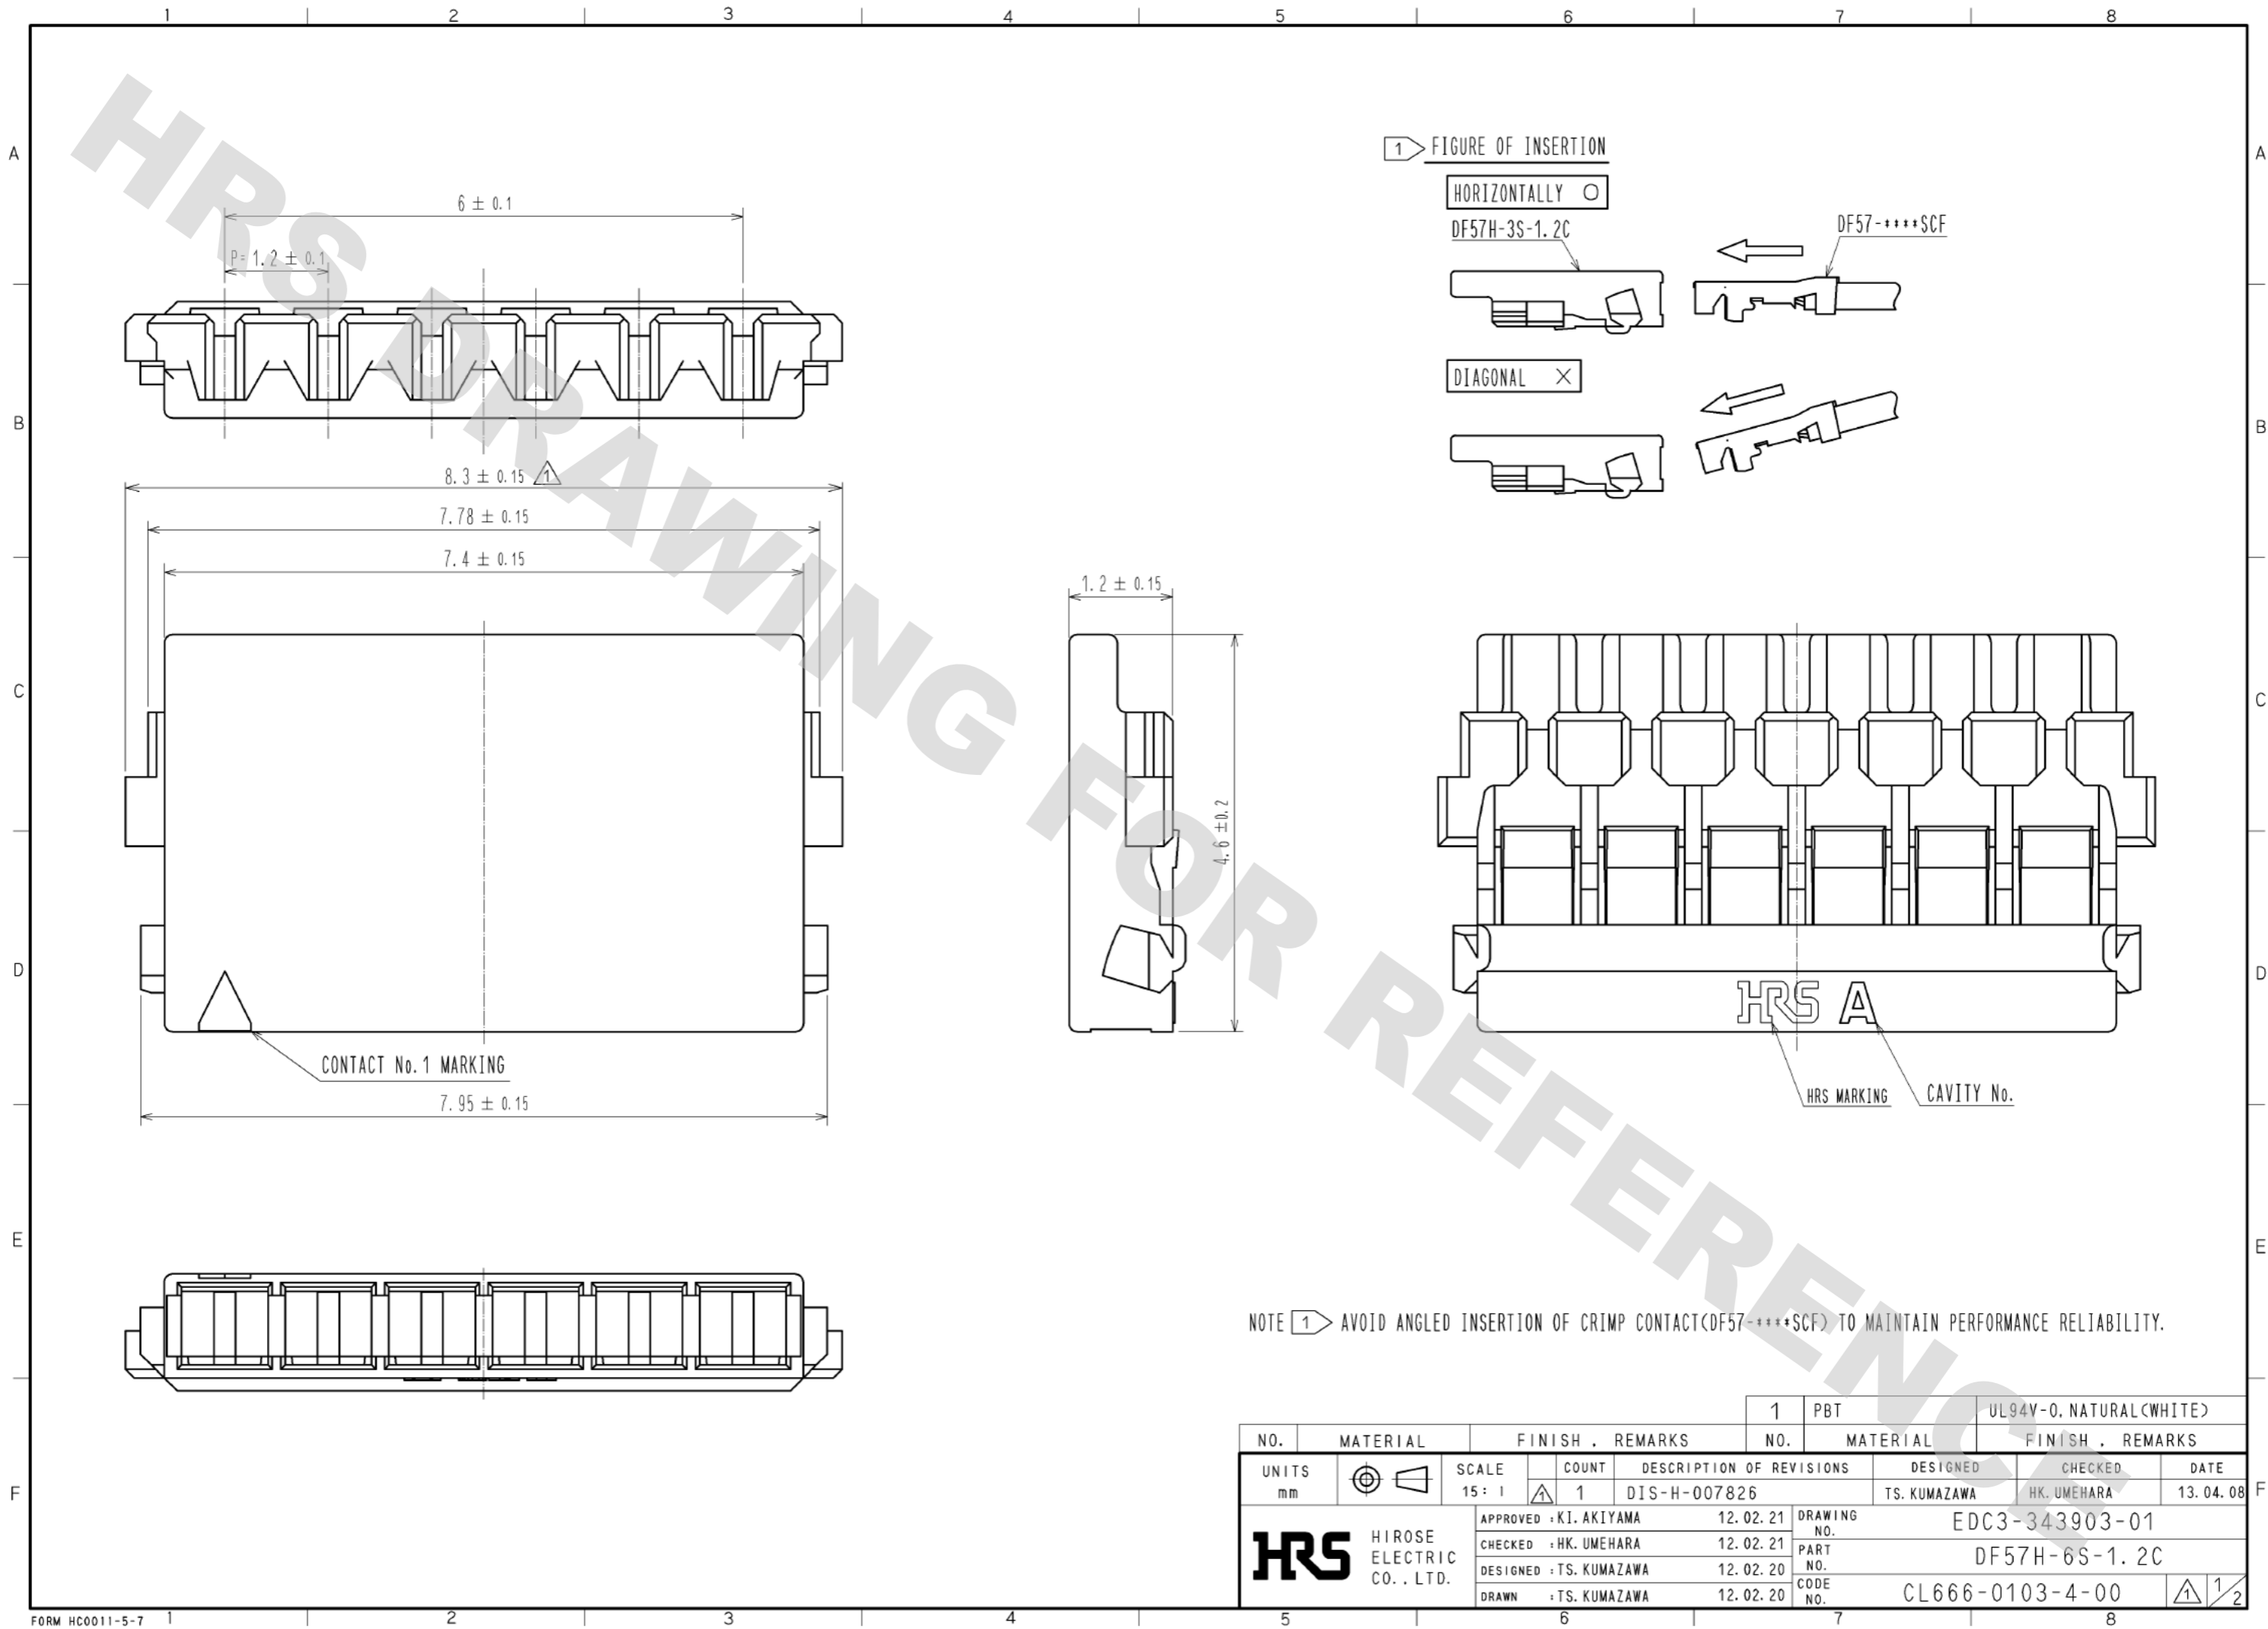


# DF57 Series Mating / Unmating Operation Instruction (For DF57 series)

## Mating


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direction.

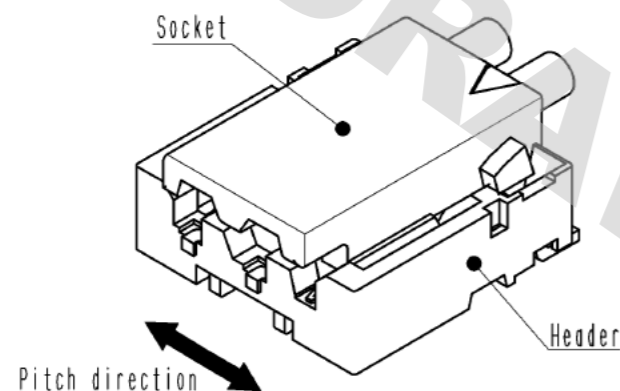

②Slightly press the socket down at cable side to tilted angle.

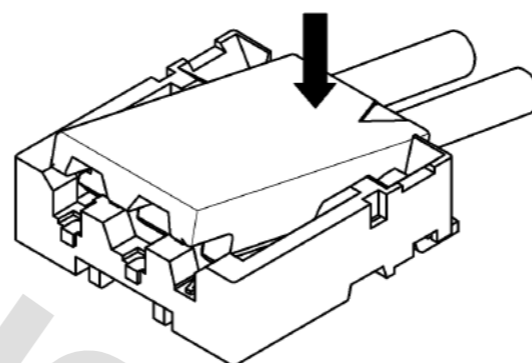


③Press down at the lever side with stabilizing the cable side to insert. Mating completes.

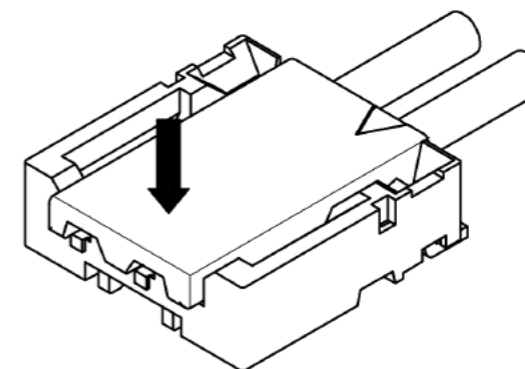


## Unmating


①Hook the lever with finger nail.

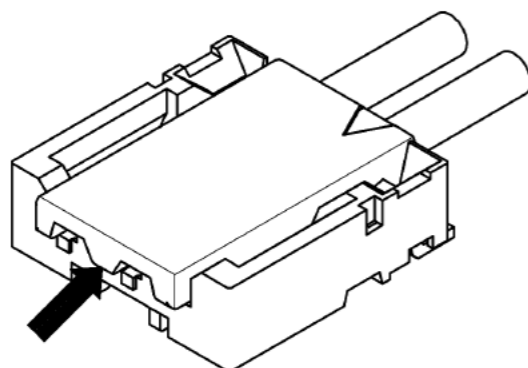

②Lift up to the upper direction and friction lock is released.

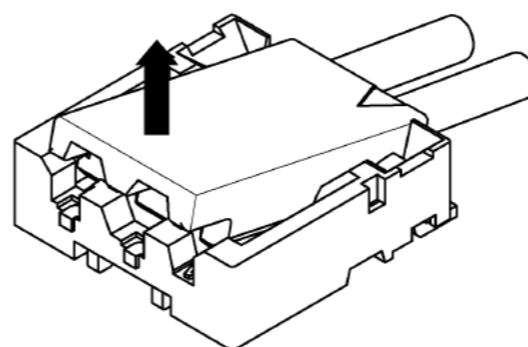

③Lift up to the upper direction and positive lock is released. Removal completes.

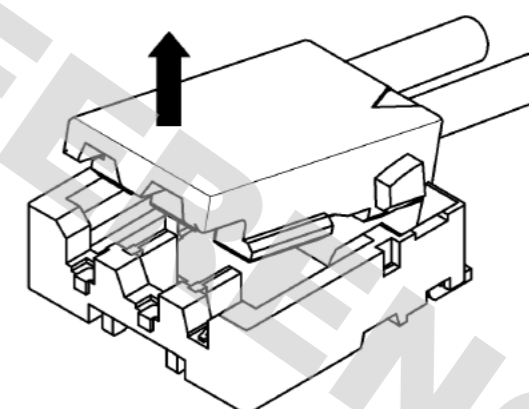

**HRS**

DRAWING NO. EDC3-343903-01  
PART NO. DF57H-6S-1.2C  
CODE NO. CL666-0103-4-00

2/2